

Daniamant



English Version

Rescue-Master 12V Survival Craft External Light

Installation and Maintenance Instructions



Description

The Rescue-Master 12V light is intended for motorised survival craft and to be connected to the crafts 12V electrical system. The lamp is polarized, so when connected correctly, the lamp will flash.

Daniamant Limited

Unit 3, The Admiral Park, Airport Service Road, Portsmouth, UK PO3 5RQ
Telephone: +44 (0)23 9267 5100 Facsimile: +44 (0)23 9267 5101
www.daniamant.com



Installation

The exact method of mounting will depend on the proposed installation. The product has been designed to offer a wide choice of mounting methods.

The lamp is polarized, so when connected correctly, the lamp is flashing. Incorrect connection will result in a steady light.

Maintenance

- The lamp can be replaced by unscrewing the cap's four screws. Replace the lamp only with original lamp from Daniamant.
- Replace lamp after 12 hours of use.
- Replace complete unit is found to be faulty.

Spare parts

Spare parts for this lighting system are available from Daniamant Limited, at the address shown on the front page.

Product Disposal Instructions

Daniamant's Survivor Location Lights contain batteries as well as electrical and electronic components, and must therefore be segregated from the domestic waste stream and recycled. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Daniamant's lights are marked with the symbol below which conveys that this waste must be treated separately from household waste.

To ensure compliance with the WEEE and Battery Regulations, the Survivor Location Lights placed on the market in the UK or Denmark should be returned to Daniamant in the UK or Denmark, or deposited in your nearest WEEE Designated Collection Facility, operated by your Local Authority.



Further copies of this installation and maintenance instructions are available to download from our website www.daniamant.com
A copy of these instructions must be held with the ships/owners training manual.